


Cockpit Accessory Mount User Guide

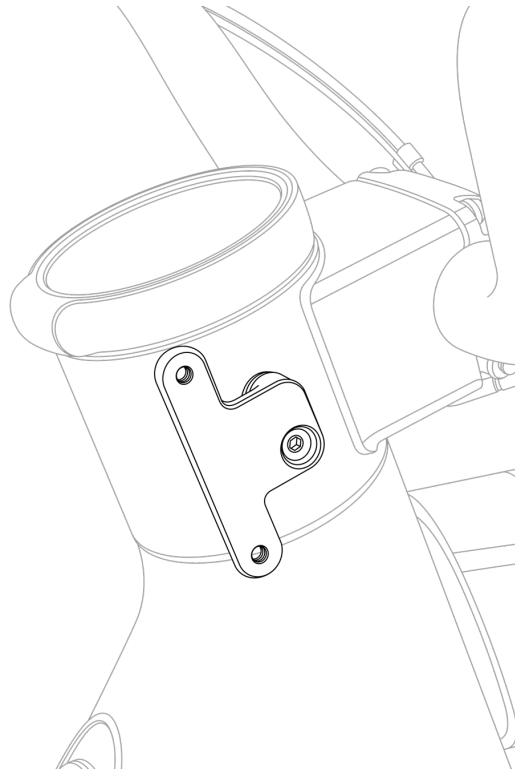

Contents

Overview.....	2
Specifications.....	2
Box Contents.....	2
Tools.....	2
Safety Information.....	3
Installation.....	3
Before You Ride.....	5
Accessory Care.....	5
ALSO Accessory Limited Warranty.....	5

Overview


The ALSO cockpit accessory mount allows you to attach accessories to one or both sides of the TM-B stem, just under the Portal display. It consists of two plates that are mirror images of each other. This guide provides step-by-step installation instructions and tips for long-term care.

Specifications

- Weight capacity on each side: 1.5 lbs (0.7 kg)
- Dimensions: 1.6 in (41 mm) wide x 3.1 in (80 mm) long
- Accessory hole spacing: 2.5 in (64 mm), standard water bottle mount distance

Box Contents

Your box contains:

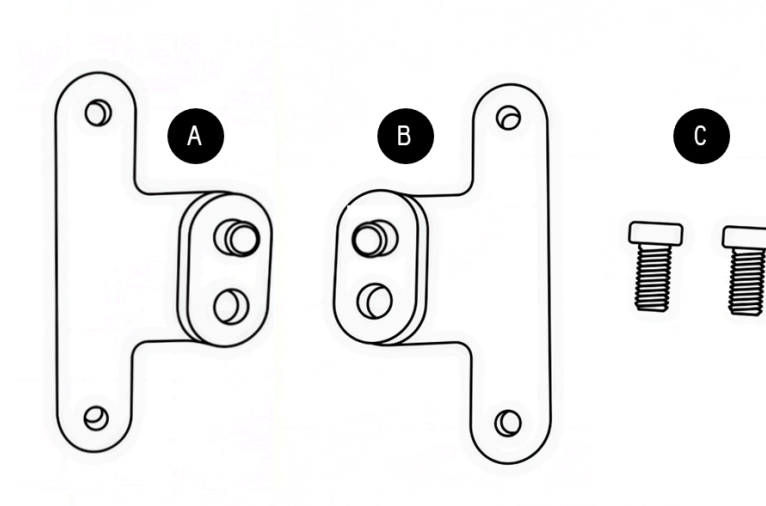

A	1x left accessory mount
B	1x right accessory mount
C	2x threaded screws

Tools

Before you begin, have the following tools ready:

- 4 mm Allen key or the bike tool
- Torque wrench capable of 8 Nm (such as the one shipped with the TM-B)

Safety Information

⚠ WARNING: Use only with TM-B models approved by ALSO. Use on other bicycles or modified bicycles may result in failure, loss of control, serious injury, or death.

⚠ WARNING: If you are not comfortable performing this installation or do not have the required tools, have the accessory installed by an ALSO qualified service partner or qualified bicycle mechanic. Improper installation may result in component failure, serious injury, or death.


⚠ CAUTION: Do not use the mount holes on the stem of the e-bike for directly attaching any other accessory except the cockpit accessory mount.

⚠ CAUTION: The Cockpit Accessory Mount may be used to attach third-party accessories such as water bottle cages, provided they are securely installed, remain within the mount's specified weight capacity, and do not interfere with safe operation of the e-bike. ALSO does not warrant the compatibility, performance, or safety of any third-party accessory not designed or tested by ALSO.


Installation

The instructional diagrams show how to install the right side plate (as seen when riding the e-bike), but the procedure is the same for the left side.


1. Position the e-bike on its kickstand over level ground.
2. Pull the stem cover off the right side of the TM-B stem. Two holes are now visible.

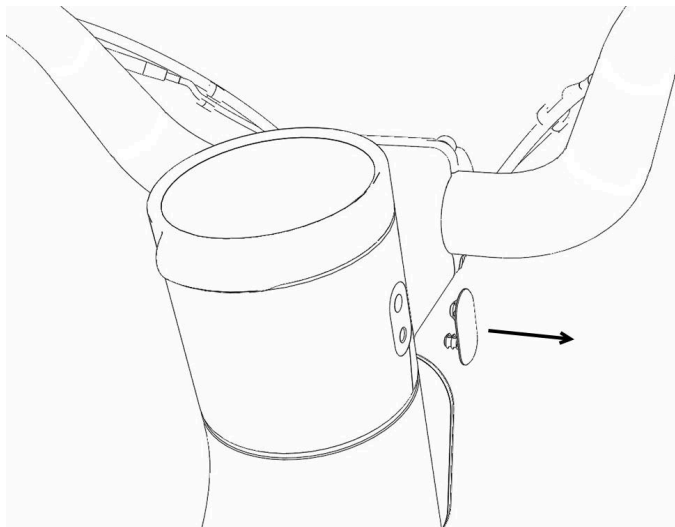

3. Identify the right accessory mount plate. Orient the plate with the locator pin on the top and the vertical branch with the holes facing you.

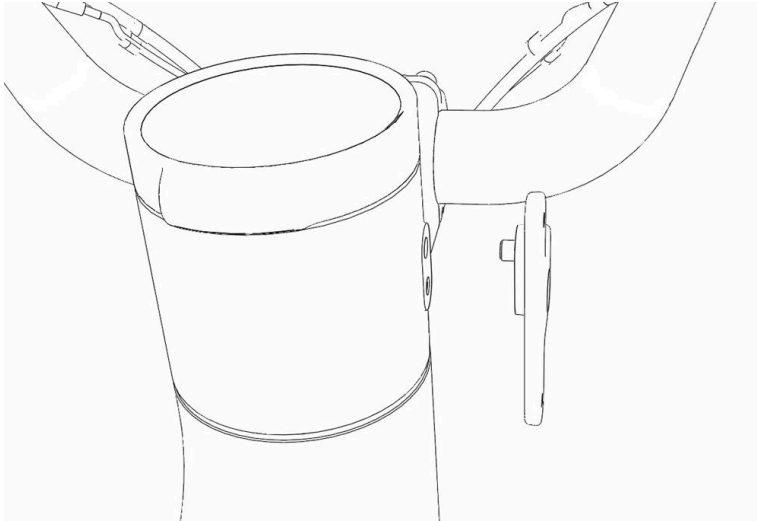

4. Insert the locator pin into the mount on the right side of the stem.
5. Use a 4 mm Allen key or the bike tool to fasten a screw into the bottom hole.

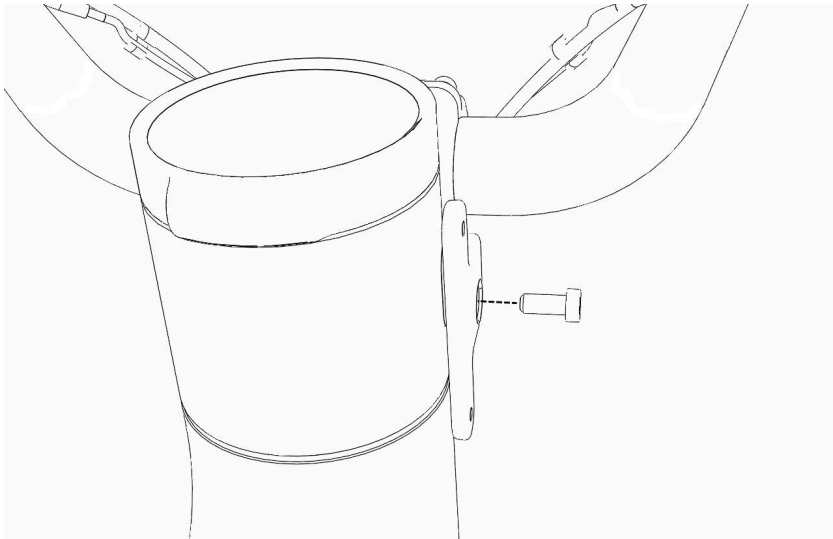

6. Using the torque wrench, torque the screw to 8 Nm.
7. Gently push and pull the plate to confirm it is secured.
8. If desired, repeat the steps above to install the left plate.

i IMPORTANT: Once the cockpit accessory mount is securely fastened, you can attach other accessories to it. Refer to that accessory's guide for its own installation instructions.

Before You Ride

The rider is responsible for ensuring accessories and cargo are securely fastened and do not interfere with safe operation of the bicycle. Before your first ride:

- Verify that all fasteners are tightened to the specified torque.
- Verify the accessory is securely attached, and steering, braking, suspension travel, drivetrain operation, and rider movement are not obstructed.
- Perform a short, low-speed test ride in a safe area before normal use.
- Verify that steering moves freely through its full range of motion before riding.
- Verify adequate clearance between the tires and cargo throughout the entire steering range and suspension travel.
- Ensure accessories and cargo do not obscure reflectors or lights, to improve visibility on the road.

Accessory Care

- Use mild soap, lukewarm water, and a soft cloth to clean the accessory mounts as needed.
- Check if either accessory mount feels loose before each ride, and tighten the screws if needed. Recheck fastener torque after the first 25 miles (40 km) or first several rides, and periodically thereafter.

ALSO Accessory Limited Warranty

For warranty information and details on submitting warranty claims, refer to the ALSO website at: <https://ridealso.com/>

©2026 ALSO. Inc. All rights reserved.

All information in this document and all ALSO software is subject to copyright and other intellectual property rights of ALSO. Inc., its affiliates, or its licensors. Use of software embedded in the TM-B and the app are subject to applicable license terms. This material may not be modified, reproduced, or copied, in whole or in part, without the prior written permission of ALSO. Inc., its affiliates, or its licensors. ALSO, TM-B, Transcendent Mobility, DreamRide, Portal, and related marks are trademarks or registered trademarks of ALSO. Inc. and its affiliates in the United States and other countries. USB-C® is a registered trademark of USB Implementers Forum.

ALSO. Inc. (also referred to as "ALSO" herein) is constantly updating and improving its products. Software is updated using periodic Over-The-Air (OTA) updates, which can add, change, or remove features. For the latest information, always refer to the digital Accessory Guide on the website. PDFs or printed documents might be out of date.

Some features might not be available depending on your product configuration or region.

The images in this document are for illustrative purposes only. Depending on the product details and region, the information in this document may appear slightly different from your product. This guide is informational only and does not modify or expand any limited warranty provided with the product.

ALSO. Inc., 450 Lambert Ave, Palo Alto, CA 94306